

Setup Mode

Editing the Aftertouch Control

Press the Aftertouch key to assign control code for the keyboard after touch feature. The "A.Touch" will appear on the display with its value of the current control in the data area. The value is also shown under the Val tag on the second row of the display. Use the DATA +/- button to change the value or enter the data by pressing the numerical keys on the keyboard. Press both DATA +/- button simultaneously to recover the original value. Press the ENTER key or the ENTER button to confirm your setting and save it. The value display will stop blinking.

Selecting the Keyboard Velocity Curve

Press the K.Curve key to select a velocity curve for keyboard. The "KB.Curve" will appear in the Operation area of the display with its current velocity curve number in the data area. The Operation area will then change to show the current velocity curve. The number is also shown and blink under the KB.Vel tag on the second row of the display. Use the DATA +/- button or enter the number by pressing the numerical keys on the keyboard to select a curve. Press the ENTER key or the ENTER button to confirm your setting and save it. The name of the velocity curve will be updated. The value display will stop blinking.

Available Velocity Curves

No.	Type	Description
0	Normal	Linear type curve - Default
1	Soft 1	Results in a lower transmitted velocity (and corresponding volume), option 1
2	Soft 2	Results in a lower transmitted velocity (and corresponding volume), option 2
3	Hard 1	Results in a higher transmitted velocity (and corresponding volume), option 1
4	Hard 2	Results in a higher transmitted velocity (and corresponding volume), option 2
5	Expand	Emphasizing the louder volume and softening the lower volume
6	Compress	Emphasizing the softer volume and softening the louder volume
7	Fix 64	Note velocity is fixed to 64
8	Fix 100	Note velocity is fixed to 100
9	Fix 127	Note velocity is fixed to 127

